

2.75"
5. Flap (Outside)

2.88"
6. Back (Outside)

2.88"
1. Front (Outside)

FULL INSTRUCTIONS

Now that you have had your Spot introduction, take a look at the full Spot app instructions

Learn More About:

- Registering for Search Party
- The proximity meter
- The map
- Taking pictures with Spot
- Turning on/off alarms for Tether Mode
- Switching between modes
- Renaming your Spot
- Creating silent places & times
- Customizing your Spot icon
- Unpairing & removing your Spot
- Frequently Asked Questions & more!

Specs

- Compatibility:** iOS 8.0 or later & Android 4.3 OS or later
Communication: Bluetooth® 4.0
Distance: Connects up to 120 ft from your phone
Battery: Replaceable cell #CR2032

SPOT

Finder with Bluetooth® Wireless Technology



These are basic introductory instructions.

3.75"



Exclusive Product Warranty Offer

This product is backed by a warranty that covers repair or replacement at our option. You must register by filling out the online form within 10 days of receipt of this product.

2.88"
2. Left (Inside)

2.88"
3. Center (Inside)

2.75"
4. Right/Flap (Inside)

What is Spot?

Spot is a Bluetooth® finder that you attach to your most important items to keep track of them.

The Spot & the Spot app can alert you when you may be leaving something behind, can help you locate your phone and can help you locate any item that your Spot is connected to.

Important to Know

- **The Spot app must always be running in the background on your mobile device.**
- A Spot can only be paired to one mobile device at a time.
- A maximum of four Spots can be connected to one mobile device at a time (this includes Spot, Spot Pro, TouchFind, SpotStay and SpotStay Pro collectively).
- Bluetooth® settings on your mobile device must always be on.
- Location services on your device must be on for the map feature to function.

Getting Started

- Search "Spot Bluetooth Finder" and download from iTunes or Google Play.
- Remove the plastic tab that is sticking out of the Spot housing.
- Wait 10 seconds for the battery to fully activate.
- Push the button on the Spot.
- The Spot will emit a "chime" sound.
- Make sure the Bluetooth setting on your mobile device is on.

Pairing Your Spot

- Open the Spot app.
- Press & hold the button on Spot for 2 seconds.
- Select your Spot from the list of nearby Spots.
- Choose your mode: Find Mode or Tether Mode (see right panel to learn more).

Search Party

In the Spot app, you will see the option to Login. This is referring to the Search Party feature. See full instructions to learn more.





Find Mode

- Find Mode helps locate missing items.
- In Find Mode, you can sound an alarm on your Spot when you tap the FIND button.
- You can also sound an alarm on your mobile device when you press the button on the Spot itself.
- Spot must be within Bluetooth® range of your mobile device for the Find feature to function properly.

Tether Mode

- Tether Mode helps keep you from leaving important belongings behind.
- It can also act as an anti-theft alarm for your devices.
- Tether Mode creates an invisible tether between your mobile device & your Spot.
- Once your Spot leaves the Bluetooth range of your mobile device, your Spot & device will sound an alarm to notify you.

3.75"

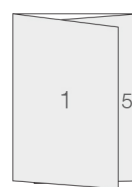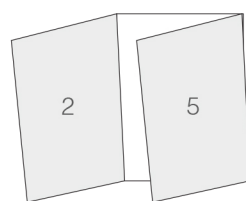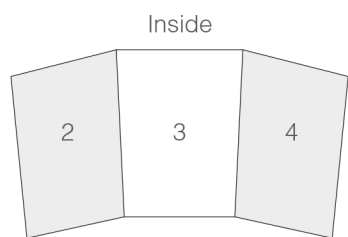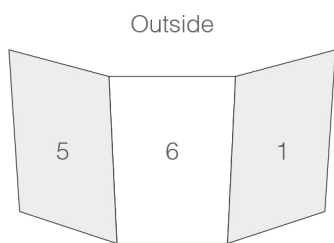

Bleed Lines ————
Fold Lines - - - - -

Custom Card Instructions:

- Please embed any photos and outline any text used in the design of the card.
- The red guide is for the bleed. Any art on the card that will reach the edge of the paper must be extended to the red bleed line.
- When creating a custom card, it is recommended to customize the front & leave the instructions on the rest of the pages to benefit the end user.

FULL INSTRUCTIONS

Now that you have had your Spot introduction, take a look at the full Spot app instructions

Learn More About:

- Registering for Search Party
- The proximity meter
- The map
- Taking pictures with Spot
- Turning on/off alarms for Tether Mode
- Switching between modes
- Renaming your Spot
- Creating silent places & times
- Customizing your Spot icon
- Unpairing & removing your Spot
- Frequently Asked Questions
- & more!

Specs

Compatibility: iOS 8.0 or later & Android 4.3 OS or later

Communication: Bluetooth® 4.0

Distance: Connects up to 120 ft from your phone

Battery: Replaceable cell #CR2032



Exclusive Product Warranty Offer

This product is backed by a warranty that covers repair or replacement at our option. You must register by filling out the online form within 10 days of receipt of this product



Finder with Bluetooth® Wireless Technology



These are basic introductory instructions.

What is Spot?

Spot is a Bluetooth® finder that you attach to your most important items to keep track of them.

The Spot & the Spot app can alert you when you may be leaving something behind, can help you locate your phone and can help you locate any item that your Spot is connected to.

Important to Know

- **The Spot app must always be running in the background on your mobile device.**
- A Spot can only be paired to one mobile device at a time.
- A maximum of four Spots can be connected to one mobile device at a time (this includes Spot, Spot Pro, TouchFind, SpotStay and SpotStay Pro collectively).
- Bluetooth® settings on your mobile device must always be on.
- Location services on your device must be on for the map feature to function.

Getting Started

- Search “Spot Bluetooth Finder” and download from iTunes or Google Play.
- Remove the plastic tab that is sticking out of the Spot housing.
- Wait 10 seconds for the battery to fully activate.
- Push the button on the Spot.
- The Spot will emit a “chime” sound.
- Make sure the Bluetooth setting on your mobile device is on.

Pairing Your Spot

- Open the Spot app.
- Press & hold the button on Spot for 2 seconds.
- Select your Spot from the list of nearby Spots.
- Choose your mode: Find Mode or Tether Mode (see right panel to learn more).

Search Party

In the Spot app, you will see the option to Login. This is referring to the Search Party feature. See full instructions to learn more.

Find Mode

- Find Mode helps locate missing items.
- In Find Mode, you can sound an alarm on your Spot when you tap the FIND button.
- You can also sound an alarm on your mobile device when you press the button on the Spot itself.
- Spot must be within Bluetooth® range of your mobile device for the Find feature to function properly.

Tether Mode

- Tether Mode helps keep you from leaving important belongings behind.
- It can also act as an anti-theft alarm for your devices.
- Tether Mode creates an invisible tether between your mobile device & your Spot.
- Once your Spot leaves the Bluetooth range of your mobile device, your Spot & device will sound an alarm to notify you.